




eGrille Lite Fitting Instructions

For VW T5.1

TOOLS REQUIRED: TRIM TOOLS, SCREW DRIVERS, WIRE CUTTERS, VHB TAPE OR GLUE

ADDITIONAL ITEMS REQUIRED (NOT SUPPLIED):
VW T6+ OEM CHROME BADGE (OR AFTERMARKET EQUIVALENT)

1. BADGE REMOVAL

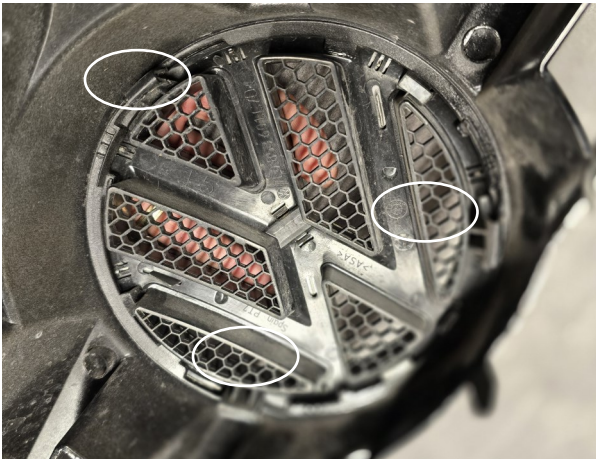

You will need to use the trim tools to remove the grille from the front of the vehicle. Once removed use trim tools or a small flat screw driver to remove the existing badge by unclipping and rotating the badge to release.




2. INSTALLATION



Insert the eGrille in the correct orientation and lay the grille on its face.


TIP: Protect the grille and eGrille with a piece of cloth to prevent scratching.

Use the provided plastic arms and screws, ensuring the arm is located in the lip as shown.

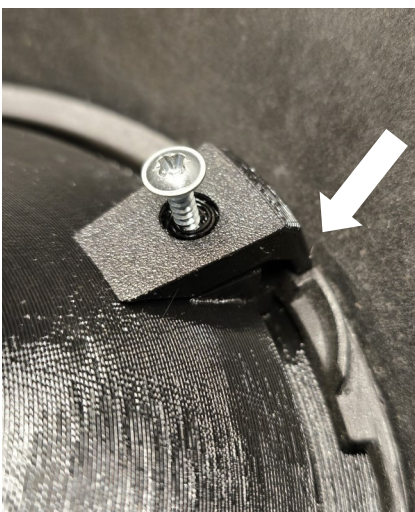


NOTE: HAND TIGHTEN SCREWS ONLY

DO NOT OVER TIGHTEN

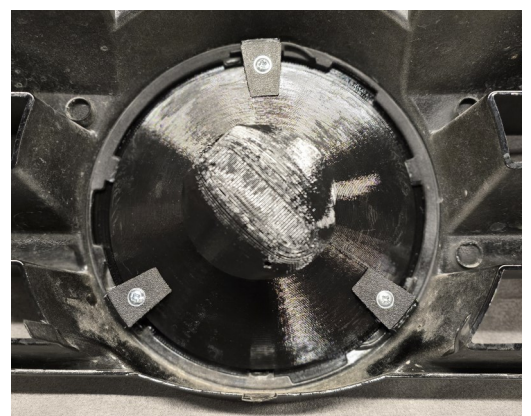

5. CABLING & HOOKUP PLUG

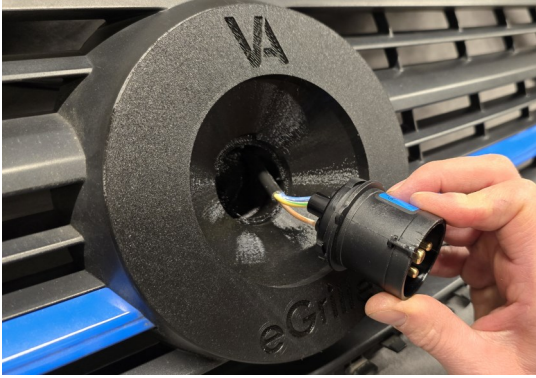

Run your 240v 3-core cable to the grill cutout, ensure the grommet is installed into the e-grille and push the cable through

Connect the 240v cabling into the supplied hookup plug.

Insert plug at approx. 11oclock, ensuring its firmly in place, and rotate clockwise to 12oclock

You should hear it click.



NOTE: ONCE INSTALLED YOU NEED TO GAIN ACCESS TO THE REAR OF THE EGRILLE TO REMOVE.

PUSH IN THE RETAINING TAB AND ROTATE ANTI-CLOCKWISE.

6. BADGE ADAPTER



Install the items in the following order into the plug part of the badge adapter

- Spring
- Plastic washer
- Metal washer
- Allen screw

NOTE: HAND TIGHTEN THE ALLEN SCREW UNTIL IT BOTTOMS OUT, BUT DO NOT OVERTIGHTEN.




6. BADGE CONSTRUCTION



You will need to use your purchased T6+ VW badge, remove all of the tabs from the chrome badge at the back, apart from those for the letter V and W.

Use VHB , 2-pack epoxy, PU or any other appropriate glue to affix the chrome badge to the eGrille badge adapter, ensuring the supplied black backing plate is sandwiched in-between.

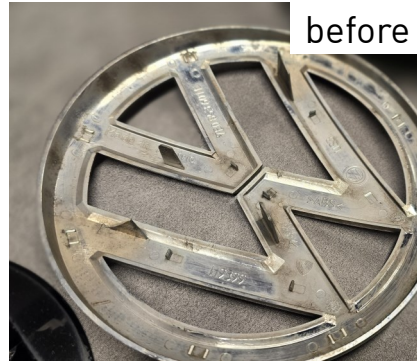

7. INSTALLING AND REMOVING THE BADGE




To install the badge adapter, align the plug to the adapter at approx. 2oclock and push in until flat with the grille.

Rotate anti-clockwise till the VW logo is the correct orientation.

To remove, push the badge in with the palm of you hand and rotate clockwise to 2oclock. The badge will push itself out to allow removal.

Installation

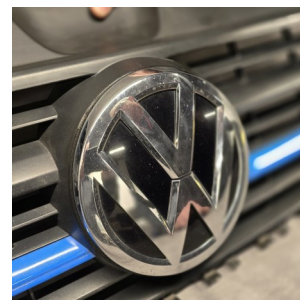

Removal

