



eGrille Lite Fitting Instructions

For VW T6, T6.1 & Crafter

TOOLS REQUIRED: DRILL & DRILL BITS FOR PLASTIC, MULTITOOL OR OTHER PLASTIC CUTTING TOOL, TRIM TOOLS, SCREW DRIVERS, WIRE CUTTERS, VHB TAPE OR GLUE

NOTE: THE LITE VERSION OF THE EGRILLE HAS BEEN DESIGNED TO BE FITTED WITH THE GRILLE AND BUMPER STILL IN SITU ON THE VEHICLE. HOWEVER, PLEASE ENSURE YOU TAKE THE NECESSARY PRECAUTIONS TO AVOID DAMAGE TO ANYOTHER PART OF THE VEHICLE INCLUDING THE RADIATOR .

IMPORTANT: THIS IS A INTERFERENCE FIT WHICH IS TIGHT, UTILISING THE ELASTICITY OF THE ORIGINAL GRILLE PLASTIC. IF YOUR GRILLE IS OLD, BRITTLE OR DAMAGED THE INSTALLATION FORCE MAY CAUSE THE GRILLE TO BREAK. DO NOT CONTINUE INSTALLATION IF YOU BELIEVE THERE IS A RISK OF DAMAGE TO YOUR GRILLE AS WE TAKE NO RESPONSIBILITY FOR ANY DAMAGE CAUSED.


1. BADGE REMOVAL



You will need to use the trim tools to remove the original chrome badge from the vehicle along with the black backing plate.

NOTE: KEEP THESE SAFE FOR USE LATER.

2. GRILLE CUTTING

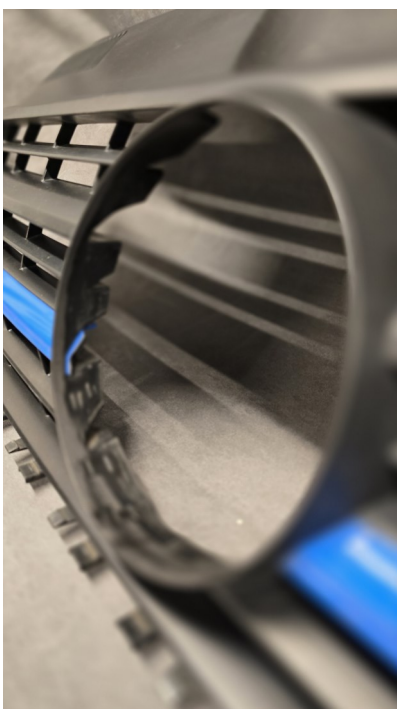


Drill a hole in the grille as a starting point for the Multitool and cut out the original badge area as shown.

Trim any remaining plastic around the badge area to ensure a good fit.

NOTE: TAKE THE NECESSARY PRECAUTIONS TO NOT DAMAGE THE RADIATOR.



3. CABELING

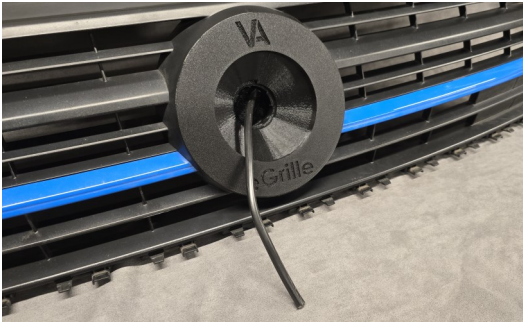

Run your 240v 3-core cable to the grill cutout, ensure the grommet is installed into the e-grille and poke the cable through the whole now whilst access is easier.

NOTE: TAKE THE NECESSARY PRECAUTIONS TO NOT DAMAGE THE RADIATOR.

4. E-GRILLE INSTALLATION



1

Insert the eGrille at an approx. 45degree angle, top first. Use fingers either side of grille and your thumbs on the eGrille to firmly push the bottom of the eGrille into the hole.

You should hear it click into place.



3



4




2



5

NOTE: ENSURE THE E-GRILLE IS ROTATED CORRECTLY DURING INSTALLATION.


5. HOOKUP PLUG

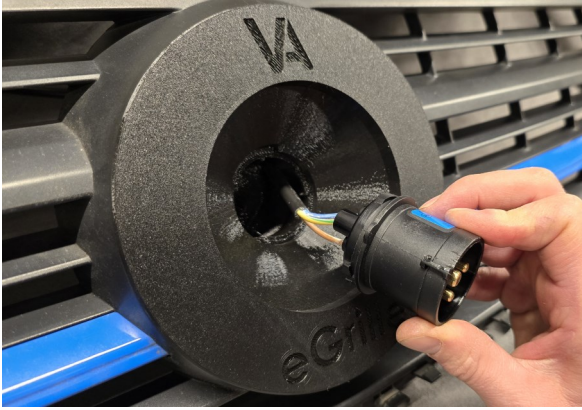

Install the 240v cabling into the supplied hookup plug.

Insert plug at approx. 11oclock, ensuring its firmly in place, and rotate clockwise to 12oclock

You should hear it click.

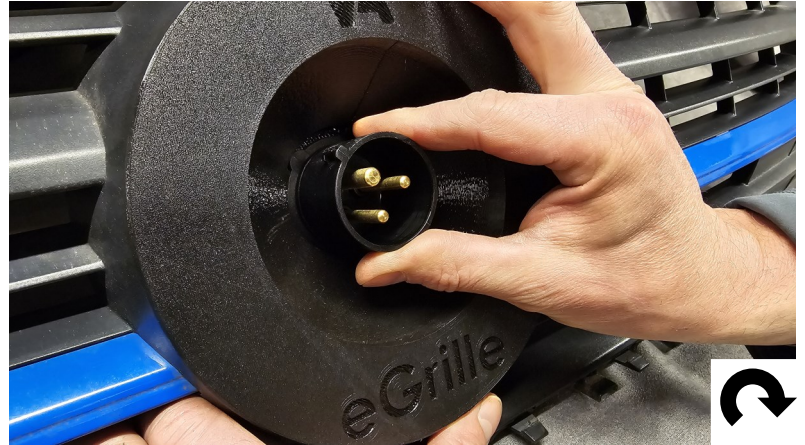

NOTE: ONCE INSTALLED YOU NEED TO GAIN ACCESS TO THE REAR OF THE EGRILLE TO REMOVE.

PUSH IN THE RETAINING TAB AND ROTATE ANTI-CLOCKWISE.

6. BADGE ADAPTER



Install the items in the following order into the plug part of the badge adapter

- Spring
- Plastic washer
- Metal washer
- Allen screw

NOTE: HAND TIGHTEN THE ALLEN SCREW UNTIL IT BOTTOMS OUT, BUT DO NOT OVERTIGHTEN.



6. BADGE CONSTRUCTION



Clean up your old badge and back plate, remove all of the tabs from the chrome badge from the back part from those from the letter V and W.

Use VHB , 2-pack epoxy, PU or any other appropriate glue to affix the chrome badge to the eGrille badge adapter, ensuring the backing plate sandwiched in-between.



7. INSTALLING AND REMOVING THE BADGE



To install the badge adapter, align the plug to the adapter at approx. 2oclock and push in until flat with the grille.

Rotate anti-clockwise till the VW logo is the correct orientation.

To remove, push the badge in with the palm of you hand and rotate clockwise to 2oclock. The badge will push itself out to allow removal.

Installation



Removal

